R&S®TSMA
Autonomous Mobile Network Scanner
User Manual

1177.5610.02 ─ 03

Test & Measurement

User Manual

ROHDE&SCHWARZ

This manual describes the following R&S®TSMA models:

- R&S®TSMA (1514.6520.20)

© 2015 Rohde & Schwarz GmbH & Co. KG
Mühldorfstr. 15, 81671 München, Germany
Phone: +49 89 41 29 - 0
Fax: +49 89 41 29 12 164
Email: info@rohde-schwarz.com
Internet: www.rohde-schwarz.com
Subject to change – Data without tolerance limits is not binding.
R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.
Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®TSMA is abbreviated as R&S TSMA.

Basic Safety Instructions

Always read through and comply with the following safety instructions!

All plants and locations of the Rohde & Schwarz group of companies make every effort to keep the safety standards of our products up to date and to offer our customers the highest possible degree of safety. Our products and the auxiliary equipment they require are designed, built and tested in accordance with the safety standards that apply in each case. Compliance with these standards is continuously monitored by our quality assurance system. The product described here has been designed, built and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards. To maintain this condition and to ensure safe operation, you must observe all instructions and warnings provided in this manual. If you have any questions regarding these safety instructions, the Rohde & Schwarz group of companies will be happy to answer them.

Furthermore, it is your responsibility to use the product in an appropriate manner. This product is designed for use solely in industrial and laboratory environments or, if expressly permitted, also in the field and must not be used in any way that may cause personal injury or property damage. You are responsible if the product is used for any purpose other than its designated purpose or in disregard of the manufacturer's instructions. The manufacturer shall assume no responsibility for such use of the product.

The product is used for its designated purpose if it is used in accordance with its product documentation and within its performance limits (see data sheet, documentation, the following safety instructions). Using the product requires technical skills and, in some cases, a basic knowledge of English. It is therefore essential that only skilled and specialized staff or thoroughly trained personnel with the required skills be allowed to use the product. If personal safety gear is required for using Rohde & Schwarz products, this will be indicated at the appropriate place in the product documentation. Keep the basic safety instructions and the product documentation in a safe place and pass them on to the subsequent users.

Observing the safety instructions will help prevent personal injury or damage of any kind caused by dangerous situations. Therefore, carefully read through and adhere to the following safety instructions before and when using the product. It is also absolutely essential to observe the additional safety instructions on personal safety, for example, that appear in relevant parts of the product documentation. In these safety instructions, the word "product" refers to all merchandise sold and distributed by the Rohde & Schwarz group of companies, including instruments, systems and all accessories. For product-specific information, see the data sheet and the product documentation.

Safety labels on products

The following safety labels are used on products to warn against risks and dangers.

Symbol	Meaning	Symbol	Meaning
	Notice, general danger location Observe product documentation		ON/OFF Power
	Caution when handling heavy equipment		Standby indication
	Danger of electric shock		Direct current (DC)

Symbol	Meaning	Symbol	Meaning
	Caution ! Hot surface		Alternating current (AC)
	Protective conductor terminal To identify any terminal which is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth		Direct/alternating current (DC/AC)
	Earth (Ground)		Class II Equipment to identify equipment meeting the safety requirements specified for Class II equipment (device protected by double or reinforced insulation)
	Frame or chassis Ground terminal		EU labeling for batteries and accumulators For additional information, see section "Waste disposal/Environmental protection", item 1.
	Be careful when handling electrostatic sensitive devices		EU labeling for separate collection of electrical and electronic devices For additional information, see section "Waste disposal/Environmental protection", item 2.
	Warning! Laser radiation For additional information, see section "Operation", item 7.		

Signal words and their meaning

The following signal words are used in the product documentation in order to warn the reader about risks and dangers.

DANGER Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE Indicates information considered important, but not hazard-related, e.g. messages relating to property damage.
In the product documentation, the word ATTENTION is used synonymously.

These signal words are in accordance with the standard definition for civil applications in the European Economic Area. Definitions that deviate from the standard definition may also exist in other economic areas or military applications. It is therefore essential to make sure that the signal words described here are always used only in connection with the related product documentation and the related product. The use of signal words in connection with unrelated products or documentation can result in misinterpretation and in personal injury or material damage.

Operating states and operating positions

The product may be operated only under the operating conditions and in the positions specified by the manufacturer, without the product's ventilation being obstructed. If the manufacturer's specifications are not observed, this can result in electric shock, fire and/or serious personal injury or death. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

1. Unless otherwise specified, the following requirements apply to Rohde & Schwarz products: predefined operating position is always with the housing floor facing down, IP protection 2X, use only indoors, max. operating altitude 2000 m above sea level, max. transport altitude 4500 m above sea level. A tolerance of ±10 % shall apply to the nominal voltage and ±5 % to the nominal frequency, overvoltage category 2, pollution degree 2.
2. Do not place the product on surfaces, vehicles, cabinets or tables that for reasons of weight or stability are unsuitable for this purpose. Always follow the manufacturer's installation instructions when installing the product and fastening it to objects or structures (e.g. walls and shelves). An installation that is not carried out as described in the product documentation could result in personal injury or even death.
3. Do not place the product on heat-generating devices such as radiators or fan heaters. The ambient temperature must not exceed the maximum temperature specified in the product documentation or in the data sheet. Product overheating can cause electric shock, fire and/or serious personal injury or even death.

Electrical safety

If the information on electrical safety is not observed either at all or to the extent necessary, electric shock, fire and/or serious personal injury or death may occur.

1. Prior to switching on the product, always ensure that the nominal voltage setting on the product matches the nominal voltage of the mains-supply network. If a different voltage is to be set, the power fuse of the product may have to be changed accordingly.
2. In the case of products of safety class I with movable power cord and connector, operation is permitted only on sockets with a protective conductor contact and protective conductor.
3. Intentionally breaking the protective conductor either in the feed line or in the product itself is not permitted. Doing so can result in the danger of an electric shock from the product. If extension cords or connector strips are implemented, they must be checked on a regular basis to ensure that they are safe to use.
4. If there is no power switch for disconnecting the product from the mains, or if the power switch is not suitable for this purpose, use the plug of the connecting cable to disconnect the product from the mains. In such cases, always ensure that the power plug is easily reachable and accessible at all times. For example, if the power plug is the disconnecting device, the length of the connecting cable must not exceed 3 m. Functional or electronic switches are not suitable for providing disconnection from the AC supply network. If products without power switches are integrated into racks or systems, the disconnecting device must be provided at the system level.
5. Never use the product if the power cable is damaged. Check the power cables on a regular basis to ensure that they are in proper operating condition. By taking appropriate safety measures and carefully laying the power cable, ensure that the cable cannot be damaged and that no one can be hurt by, for example, tripping over the cable or suffering an electric shock.

6. The product may be operated only from TN/TT supply networks fuse-protected with max. 16 A (higher fuse only after consulting with the Rohde & Schwarz group of companies).
7. Do not insert the plug into sockets that are dusty or dirty. Insert the plug firmly and all the way into the socket provided for this purpose. Otherwise, sparks that result in fire and/or injuries may occur.
8. Do not overload any sockets, extension cords or connector strips; doing so can cause fire or electric shocks.
9. For measurements in circuits with voltages V_{rms} > 30 V, suitable measures (e.g. appropriate measuring equipment, fuse protection, current limiting, electrical separation, insulation) should be taken to avoid any hazards.
10. Ensure that the connections with information technology equipment, e.g. PCs or other industrial computers, comply with the IEC 60950-1 / EN 60950-1 or IEC 61010-1 / EN 61010-1 standards that apply in each case.
11. Unless expressly permitted, never remove the cover or any part of the housing while the product is in operation. Doing so will expose circuits and components and can lead to injuries, fire or damage to the product.
12. If a product is to be permanently installed, the connection between the protective conductor terminal on site and the product's protective conductor must be made first before any other connection is made. The product may be installed and connected only by a licensed electrician.
13. For permanently installed equipment without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fuse-protected in such a way that anyone who has access to the product, as well as the product itself, is adequately protected from injury or damage.
14. Use suitable overvoltage protection to ensure that no overvoltage (such as that caused by a bolt of lightning) can reach the product. Otherwise, the person operating the product will be exposed to the danger of an electric shock.
15. Any object that is not designed to be placed in the openings of the housing must not be used for this purpose. Doing so can cause short circuits inside the product and/or electric shocks, fire or injuries.
16. Unless specified otherwise, products are not liquid-proof (see also section "Operating states and operating positions", item 1). Therefore, the equipment must be protected against penetration by liquids. If the necessary precautions are not taken, the user may suffer electric shock or the product itself may be damaged, which can also lead to personal injury.
17. Never use the product under conditions in which condensation has formed or can form in or on the product, e.g. if the product has been moved from a cold to a warm environment. Penetration by water increases the risk of electric shock.
18. Prior to cleaning the product, disconnect it completely from the power supply (e.g. AC supply network or battery). Use a soft, non-linting cloth to clean the product. Never use chemical cleaning agents such as alcohol, acetone or diluents for cellulose lacquers.

Operation

1. Operating the products requires special training and intense concentration. Make sure that persons who use the products are physically, mentally and emotionally fit enough to do so; otherwise, injuries or material damage may occur. It is the responsibility of the employer/operator to select suitable personnel for operating the products.

2. Before you move or transport the product, read and observe the section titled "Transport".
3. As with all industrially manufactured goods, the use of substances that induce an allergic reaction (allergens) such as nickel cannot be generally excluded. If you develop an allergic reaction (such as a skin rash, frequent sneezing, red eyes or respiratory difficulties) when using a Rohde & Schwarz product, consult a physician immediately to determine the cause and to prevent health problems or stress.
4. Before you start processing the product mechanically and/or thermally, or before you take it apart, be sure to read and pay special attention to the section titled "Waste disposal/Environmental protection", item 1.
5. Depending on the function, certain products such as RF radio equipment can produce an elevated level of electromagnetic radiation. Considering that unborn babies require increased protection, pregnant women must be protected by appropriate measures. Persons with pacemakers may also be exposed to risks from electromagnetic radiation. The employer/operator must evaluate workplaces where there is a special risk of exposure to radiation and, if necessary, take measures to avert the potential danger.
6. Should a fire occur, the product may release hazardous substances (gases, fluids, etc.) that can cause health problems. Therefore, suitable measures must be taken, e.g. protective masks and protective clothing must be worn.
7. Laser products are given warning labels that are standardized according to their laser class. Lasers can cause biological harm due to the properties of their radiation and due to their extremely concentrated electromagnetic power. If a laser product (e.g. a CD/DVD drive) is integrated into a Rohde & Schwarz product, absolutely no other settings or functions may be used as described in the product documentation. The objective is to prevent personal injury (e.g. due to laser beams).
8. EMC classes (in line with EN 55011/CISPR 11, and analogously with EN 55022/CISPR 22, EN 55032/CISPR 32)
   - Class A equipment:
     Equipment suitable for use in all environments except residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings
     Note: Class A equipment is intended for use in an industrial environment. This equipment may cause radio disturbances in residential environments, due to possible conducted as well as radiated disturbances. In this case, the operator may be required to take appropriate measures to eliminate these disturbances.
   - Class B equipment:
     Equipment suitable for use in residential environments and environments that are directly connected to a low-voltage supply network that supplies residential buildings

Repair and service

1. The product may be opened only by authorized, specially trained personnel. Before any work is performed on the product or before the product is opened, it must be disconnected from the AC supply network. Otherwise, personnel will be exposed to the risk of an electric shock.

2. Adjustments, replacement of parts, maintenance and repair may be performed only by electrical experts authorized by Rohde & Schwarz. Only original parts may be used for replacing parts relevant to safety (e.g. power switches, power transformers, fuses). A safety test must always be performed after parts relevant to safety have been replaced (visual inspection, protective conductor test, insulation resistance measurement, leakage current measurement, functional test). This helps ensure the continued safety of the product.

Batteries and rechargeable batteries/cells

If the information regarding batteries and rechargeable batteries/cells is not observed either at all or to the extent necessary, product users may be exposed to the risk of explosions, fire and/or serious personal injury, and, in some cases, death. Batteries and rechargeable batteries with alkaline electrolytes (e.g. lithium cells) must be handled in accordance with the EN 62133 standard.

1. Cells must not be taken apart or crushed.
2. Cells or batteries must not be exposed to heat or fire. Storage in direct sunlight must be avoided. Keep cells and batteries clean and dry. Clean soiled connectors using a dry, clean cloth.
3. Cells or batteries must not be short-circuited. Cells or batteries must not be stored in a box or in a drawer where they can short-circuit each other, or where they can be short-circuited by other conductive materials. Cells and batteries must not be removed from their original packaging until they are ready to be used.
4. Cells and batteries must not be exposed to any mechanical shocks that are stronger than permitted.
5. If a cell develops a leak, the fluid must not be allowed to come into contact with the skin or eyes. If contact occurs, wash the affected area with plenty of water and seek medical aid.
6. Improperly replacing or charging cells or batteries that contain alkaline electrolytes (e.g. lithium cells) can cause explosions. Replace cells or batteries only with the matching Rohde & Schwarz type (see parts list) in order to ensure the safety of the product.
7. Cells and batteries must be recycled and kept separate from residual waste. Rechargeable batteries and normal batteries that contain lead, mercury or cadmium are hazardous waste. Observe the national regulations regarding waste disposal and recycling.

Transport

1. The product may be very heavy. Therefore, the product must be handled with care. In some cases, the user may require a suitable means of lifting or moving the product (e.g. with a lift-truck) to avoid back or other physical injuries.
2. Handles on the products are designed exclusively to enable personnel to transport the product. It is therefore not permissible to use handles to fasten the product to or on transport equipment such as cranes, fork lifts, wagons, etc. The user is responsible for securely fastening the products to or on the means of transport or lifting. Observe the safety regulations of the manufacturer of the means of transport or lifting. Noncompliance can result in personal injury or material damage.
3. If you use the product in a vehicle, it is the sole responsibility of the driver to drive the vehicle safely and properly. The manufacturer assumes no responsibility for accidents or collisions. Never use the product in a moving vehicle if doing so could distract the driver of the vehicle. Adequately secure the product in the vehicle to prevent injuries or other damage in the event of an accident.

Waste disposal/Environmental protection

1. Specially marked equipment has a battery or accumulator that must not be disposed of with unsorted municipal waste, but must be collected separately. It may only be disposed of at a suitable collection point or via a Rohde & Schwarz customer service center.
2. Waste electrical and electronic equipment must not be disposed of with unsorted municipal waste, but must be collected separately.
   Rohde & Schwarz GmbH & Co. KG has developed a disposal concept and takes full responsibility for take-back obligations and disposal obligations for manufacturers within the EU. Contact your Rohde & Schwarz customer service center for environmentally responsible disposal of the product.
3. If products or their components are mechanically and/or thermally processed in a manner that goes beyond their intended use, hazardous substances (heavy-metal dust such as lead, beryllium, nickel) may be released. For this reason, the product may only be disassembled by specially trained personnel. Improper disassembly may be hazardous to your health. National waste disposal regulations must be observed.
4. If handling the product releases hazardous substances or fuels that must be disposed of in a special way, e.g. coolants or engine oils that must be replenished regularly, the safety instructions of the manufacturer of the hazardous substances or fuels and the applicable regional waste disposal regulations must be observed. Also observe the relevant safety instructions in the product documentation. The improper disposal of hazardous substances or fuels can cause health problems and lead to environmental damage.

For additional information about environmental protection, visit the Rohde & Schwarz website.

Instrucciones de seguridad elementales

¡Es imprescindible leer y cumplir las siguientes instrucciones e informaciones de seguridad!

El principio del grupo de empresas Rohde & Schwarz consiste en tener nuestros productos siempre al día con los estándares de seguridad y de ofrecer a nuestros clientes el máximo grado de seguridad. Nuestros productos y todos los equipos adicionales son siempre fabricados y examinados según las normas de seguridad vigentes. Nuestro sistema de garantía de calidad controla constantemente que sean cumplidas estas normas. El presente producto ha sido fabricado y examinado según el certificado de conformidad de la UE y ha salido de nuestra planta en estado impecable según los estándares técnicos de seguridad. Para poder preservar este estado y garantizar un funcionamiento libre de peligros, el usuario deberá atenerse a todas las indicaciones, informaciones de seguridad y notas de alerta. El grupo de empresas Rohde & Schwarz está siempre a su disposición en caso de que tengan preguntas referentes a estas informaciones de seguridad.

Además queda en la responsabilidad del usuario utilizar el producto en la forma debida. Este producto está destinado exclusivamente al uso en la industria y el laboratorio o, si ha sido expresamente autorizado, para aplicaciones de campo y de ninguna manera deberá ser utilizado de modo que alguna persona/cosa pueda sufrir daño. El uso del producto fuera de sus fines definidos o sin tener en cuenta las instrucciones del fabricante queda en la responsabilidad del usuario. El fabricante no se hace en ninguna forma responsable de consecuencias a causa del mal uso del producto.

Se parte del uso correcto del producto para los fines definidos si el producto es utilizado conforme a las indicaciones de la correspondiente documentación del producto y dentro del margen de rendimiento definido (ver hoja de datos, documentación, informaciones de seguridad que siguen). El uso del producto hace necesarios conocimientos técnicos y ciertos conocimientos del idioma inglés. Por eso se debe tener en cuenta que el producto solo pueda ser operado por personal especializado o personas instruidas en profundidad con las capacidades correspondientes. Si fuera necesaria indumentaria de seguridad para el uso de productos de Rohde & Schwarz, encontraría la información debida en la documentación del producto en el capítulo correspondiente. Guarde bien las informaciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.

Tener en cuenta las informaciones de seguridad sirve para evitar en lo posible lesiones o daños por peligros de toda clase. Por eso es imprescindible leer detalladamente y comprender por completo las siguientes informaciones de seguridad antes de usar el producto, y respetarlas durante el uso del producto. Deberán tenerse en cuenta todas las demás informaciones de seguridad, como p. ej. las referentes a la protección de personas, que encontrarán en el capítulo correspondiente de la documentación del producto y que también son de obligado cumplimiento. En las presentes informaciones de seguridad se recogen todos los objetos que distribuye el grupo de empresas Rohde & Schwarz bajo la denominación de "producto", entre ellos también aparatos, instalaciones así como toda clase de accesorios. Los datos específicos del producto figuran en la hoja de datos y en la documentación del producto.

Señalización de seguridad de los productos

Las siguientes señales de seguridad se utilizan en los productos para advertir sobre riesgos y peligros.

Símbolo	Significado	Símbolo	Significado
	Aviso: punto de peligro general Observar la documentación del producto		Tensión de alimentación de PUESTA EN MARCHA / PARADA
	Atención en el manejo de dispositivos de peso elevado		Indicación de estado de espera (standby)
	Peligro de choque eléctrico		Corriente continua (DC)
	Advertencia: superficie caliente		Corriente alterna (AC)
	Conexión a conductor de protección		Corriente continua / Corriente alterna (DC/AC)
	Conexión a tierra		El aparato está protegido en su totalidad por un aislamiento doble (reforzado)
	Conexión a masa		Distintivo de la UE para baterías y acumuladores Más información en la sección "Eliminación/protección del medio ambiente", punto 1.

Símbolo	Significado	Símbolo	Significado
	Aviso: Cuidado en el manejo de dispositivos sensibles a la electrostática (ESD)		Distintivo de la UE para la eliminación por separado de dispositivos eléctricos y electrónicos Más información en la sección "Eliminación/protección del medio ambiente", punto 2.
	Advertencia: rayo láser Más información en la sección "Funcionamiento", punto 7.		

Palabras de señal y su significado

En la documentación del producto se utilizan las siguientes palabras de señal con el fin de advertir contra riesgos y peligros.

Indica una situación de peligro que, si no se evita, causa lesiones graves o incluso la muerte.

Indica una situación de peligro que, si no se evita, puede causar lesiones graves o incluso la muerte.

Indica una situación de peligro que, si no se evita, puede causar lesiones leves o moderadas.

Indica información que se considera importante, pero no en relación con situaciones de peligro; p. ej., avisos sobre posibles daños materiales.
En la documentación del producto se emplea de forma sinónima el término CUIDADO.

Las palabras de señal corresponden a la definición habitual para aplicaciones civiles en el área económica europea. Pueden existir definiciones diferentes a esta definición en otras áreas económicas o en aplicaciones militares. Por eso se deberá tener en cuenta que las palabras de señal aquí descritas sean utilizadas siempre solamente en combinación con la correspondiente documentación del producto y solamente en combinación con el producto correspondiente. La utilización de las palabras de señal en combinación con productos o documentaciones que no les correspondan puede llevar a interpretaciones equivocadas y tener por consecuencia daños en personas u objetos.

Estados operativos y posiciones de funcionamiento

El producto solamente debe ser utilizado según lo indicado por el fabricante respecto a los estados operativos y posiciones de funcionamiento sin que se obstruya la ventilación. Si no se siguen las indicaciones del fabricante, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte. En todos los trabajos deberán ser tenidas en cuenta las normas nacionales y locales de seguridad del trabajo y de prevención de accidentes.

1. Si no se convino de otra manera, es para los productos Rohde & Schwarz válido lo que sigue: como posición de funcionamiento se define por principio la posición con el suelo de la caja para abajo, modo de protección IP 2X, uso solamente en estancias interiores, utilización hasta 2000 m sobre el nivel del mar, transporte hasta 4500 m sobre el nivel del mar. Se aplicará una tolerancia de ±10 % sobre el voltaje nominal y de ±5 % sobre la frecuencia nominal. Categoría de sobrecarga eléctrica 2, índice de suciedad 2.
2. No sitúe el producto encima de superficies, vehículos, estantes o mesas, que por sus características de peso o de estabilidad no sean aptos para él. Siga siempre las instrucciones de instalación del fabricante cuando instale y asegure el producto en objetos o estructuras (p. ej. paredes y estantes). Si se realiza la instalación de modo distinto al indicado en la documentación del producto, se pueden causar lesiones o, en determinadas circunstancias, incluso la muerte.
3. No ponga el producto sobre aparatos que generen calor (p. ej. radiadores o calefactores). La temperatura ambiente no debe superar la temperatura máxima especificada en la documentación del producto o en la hoja de datos. En caso de sobrecalentamiento del producto, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

Seguridad eléctrica

Si no se siguen (o se siguen de modo insuficiente) las indicaciones del fabricante en cuanto a seguridad eléctrica, pueden producirse choques eléctricos, incendios y/o lesiones graves con posible consecuencia de muerte.

1. Antes de la puesta en marcha del producto se deberá comprobar siempre que la tensión preseleccionada en el producto coincida con la de la red de alimentación eléctrica. Si es necesario modificar el ajuste de tensión, también se deberán cambiar en caso dado los fusibles correspondientes del producto.
2. Los productos de la clase de protección I con alimentación móvil y enchufe individual solamente podrán enchufarse a tomas de corriente con contacto de seguridad y con conductor de protección conectado.
3. Queda prohibida la interrupción intencionada del conductor de protección, tanto en la toma de corriente como en el mismo producto. La interrupción puede tener como consecuencia el riesgo de que el producto sea fuente de choques eléctricos. Si se utilizan cables alargadores o regletas de enchufe, deberá garantizarse la realización de un examen regular de los mismos en cuanto a su estado técnico de seguridad.
4. Si el producto no está equipado con un interruptor para desconectarlo de la red, o bien si el interruptor existente no resulta apropiado para la desconexión de la red, el enchufe del cable de conexión se deberá considerar como un dispositivo de desconexión.
   El dispositivo de desconexión se debe poder alcanzar fácilmente y debe estar siempre bien accesible. Si, p. ej., el enchufe de conexión a la red es el dispositivo de desconexión, la longitud del cable de conexión no debe superar 3 m).
   Los interruptores selectores o electrónicos no son aptos para el corte de la red eléctrica. Si se integran productos sin interruptor en bastidores o instalaciones, se deberá colocar el interruptor en el nivel de la instalación.
5. No utilice nunca el producto si está dañado el cable de conexión a red. Compruebe regularmente el correcto estado de los cables de conexión a red. Asegúrese, mediante las medidas de protección y de instalación adecuadas, de que el cable de conexión a red no pueda ser dañado o de que nadie pueda ser dañado por él, p. ej. al tropezar o por un choque eléctrico.

6. Solamente está permitido el funcionamiento en redes de alimentación TN/TT aseguradas con fusibles de 16 A como máximo (utilización de fusibles de mayor amperaje solo previa consulta con el grupo de empresas Rohde & Schwarz).
7. Nunca conecte el enchufe en tomas de corriente sucias o llenas de polvo. Introduzca el enchufe por completo y fuertemente en la toma de corriente. La no observación de estas medidas puede provocar chispas, fuego y/o lesiones.
8. No sobrecargue las tomas de corriente, los cables alargadores o las regletas de enchufe ya que esto podría causar fuego o choques eléctricos.
9. En las mediciones en circuitos de corriente con una tensión U_{eff} > 30 V se deberán tomar las medidas apropiadas para impedir cualquier peligro (p. ej. medios de medición adecuados, seguros, limitación de tensión, corte protector, aislamiento etc.).
10. Para la conexión con dispositivos informáticos como un PC o un ordenador industrial, debe comprobarse que éstos cumplan los estándares IEC60950-1/EN60950-1 o IEC61010-1/EN 61010-1 válidos en cada caso.
11. A menos que esté permitido expresamente, no retire nunca la tapa ni componentes de la carcasa mientras el producto esté en servicio. Esto pone a descubierto los cables y componentes eléctricos y puede causar lesiones, fuego o daños en el producto.
12. Si un producto se instala en un lugar fijo, se deberá primero conectar el conductor de protección fijo con el conductor de protección del producto antes de hacer cualquier otra conexión. La instalación y la conexión deberán ser efectuadas por un electricista especializado.
13. En el caso de dispositivos fijos que no estén provistos de fusibles, interruptor automático ni otros mecanismos de seguridad similares, el circuito de alimentación debe estar protegido de modo que todas las personas que puedan acceder al producto, así como el producto mismo, estén a salvo de posibles daños.
14. Todo producto debe estar protegido contra sobretensión (debida p. ej. a una caída del rayo) mediante los correspondientes sistemas de protección. Si no, el personal que lo utilice quedará expuesto al peligro de choque eléctrico.
15. No debe introducirse en los orificios de la caja del aparato ningún objeto que no esté destinado a ello. Esto puede producir cortocircuitos en el producto y/o puede causar choques eléctricos, fuego o lesiones.
16. Salvo indicación contraria, los productos no están impermeabilizados (ver también el capítulo "Estados operativos y posiciones de funcionamiento", punto 1). Por eso es necesario tomar las medidas necesarias para evitar la entrada de líquidos. En caso contrario, existe peligro de choque eléctrico para el usuario o de daños en el producto, que también pueden redundar en peligro para las personas.
17. No utilice el producto en condiciones en las que pueda producirse o ya se hayan producido condensaciones sobre el producto o en el interior de éste, como p. ej. al desplazarlo de un lugar frío a otro caliente. La entrada de agua aumenta el riesgo de choque eléctrico.
18. Antes de la limpieza, desconecte por completo el producto de la alimentación de tensión (p. ej. red de alimentación o batería). Realice la limpieza de los aparatos con un paño suave, que no se deshilache. No utilice bajo ningún concepto productos de limpieza químicos como alcohol, acetona o diluyentes para lacas nitrocelulósicas.

Funcionamiento

1. El uso del producto requiere instrucciones especiales y una alta concentración durante el manejo. Debe asegurarse que las personas que manejen el producto estén a la altura de los requerimientos necesarios en cuanto a aptitudes físicas, psíquicas y emocionales, ya que de otra manera no se pueden excluir lesiones o daños de objetos. El empresario u operador es responsable de seleccionar el personal usuario apto para el manejo del producto.
2. Antes de desplazar o transportar el producto, lea y tenga en cuenta el capítulo "Transporte".
3. Como con todo producto de fabricación industrial no puede quedar excluida en general la posibilidad de que se produzcan alergias provocadas por algunos materiales empleados —los llamados alérgenos (p. ej. el níquel)—. Si durante el manejo de productos Rohde & Schwarz se producen reacciones alérgicas, como p. ej. irritaciones cutáneas, estornudos continuos, enrojecimiento de la conjuntiva o dificultades respiratorias, debe avisarse inmediatamente a un médico para investigar las causas y evitar cualquier molestia o daño a la salud.
4. Antes de la manipulación mecánica y/o térmica o el desmontaje del producto, debe tenerse en cuenta imprescindiblemente el capítulo "Eliminación/protección del medio ambiente", punto 1.
5. Ciertos productos, como p. ej. las instalaciones de radiocomunicación RF, pueden a causa de su función natural, emitir una radiación electromagnética aumentada. Deben tomarse todas las medidas necesarias para la protección de las mujeres embarazadas. También las personas con marcapasos pueden correr peligro a causa de la radiación electromagnética. El empresario/operador tiene la obligación de evaluar y señalizar las áreas de trabajo en las que exista un riesgo elevado de exposición a radiaciones.
6. Tenga en cuenta que en caso de incendio pueden desprenderse del producto sustancias tóxicas (gases, líquidos etc.) que pueden generar daños a la salud. Por eso, en caso de incendio deben usarse medidas adecuadas, como p. ej. máscaras antigás e indumentaria de protección.
7. Los productos con láser están provistos de indicaciones de advertencia normalizadas en función de la clase de láser del que se trate. Los rayos láser pueden provocar daños de tipo biológico a causa de las propiedades de su radiación y debido a su concentración extrema de potencia electromagnética. En caso de que un producto Rohde & Schwarz contenga un producto láser (p. ej. un lector de CD/DVD), no debe usarse ninguna otra configuración o función aparte de las descritas en la documentación del producto, a fin de evitar lesiones (p. ej. debidas a irradiación láser).
8. Clases de compatibilidad electromagnética (conforme a EN 55011 / CISPR 11; y en analogía con EN 55022 / CISPR 22, EN 55032 / CISPR 32)
   - Aparato de clase A:
     Aparato adecuado para su uso en todos los entornos excepto en los residenciales y en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.
     Nota: Los aparatos de clase A están destinados al uso en entornos industriales. Estos aparatos pueden causar perturbaciones radioeléctricas en entornos residenciales debido a posibles perturbaciones guiadas o radiadas. En este caso, se le podrá solicitar al operador que tome las medidas adecuadas para eliminar estas perturbaciones.
   - Aparato de clase B:
     Aparato adecuado para su uso en entornos residenciales, así como en aquellos conectados directamente a una red de distribución de baja tensión que suministra corriente a edificios residenciales.

Reparación y mantenimiento

1. El producto solamente debe ser abierto por personal especializado con autorización para ello. Antes de manipular el producto o abrirlo, es obligatorio desconectarlo de la tensión de alimentación, para evitar toda posibilidad de choque eléctrico.
2. El ajuste, el cambio de partes, el mantenimiento y la reparación deberán ser efectuadas solamente por electricistas autorizados por Rohde & Schwarz. Si se reponen partes con importancia para los aspectos de seguridad (p. ej. el enchufe, los transformadores o los fusibles), solamente podrán ser sustituidos por partes originales. Después de cada cambio de partes relevantes para la seguridad deberá realizarse un control de seguridad (control a primera vista, control del conductor de protección, medición de resistencia de aislamiento, medición de la corriente de fuga, control de funcionamiento). Con esto queda garantizada la seguridad del producto.

Baterías y acumuladores o celdas

Si no se siguen (o se siguen de modo insuficiente) las indicaciones en cuanto a las baterías y acumuladores o celdas, pueden producirse explosiones, incendios y/o lesiones graves con posible consecuencia de muerte. El manejo de baterías y acumuladores con electrolitos alcalinos (p. ej. celdas de litio) debe seguir el estándar EN 62133.

1. No deben desmontarse, abrirse ni triturarse las celdas.
2. Las celdas o baterías no deben someterse a calor ni fuego. Debe evitarse el almacenamiento a la luz directa del sol. Las celdas y baterías deben mantenerse limpias y secas. Limpiar las conexiones sucias con un paño seco y limpio.
3. Las celdas o baterías no deben cortocircuitarse. Es peligroso almacenar las celdas o baterías en estuches o cajones en cuyo interior puedan cortocircuitarse por contacto recíproco o por contacto con otros materiales conductores. No deben extraerse las celdas o baterías de sus embalajes originales hasta el momento en que vayan a utilizarse.
4. Las celdas o baterías no deben someterse a impactos mecánicos fuertes indebidos.
5. En caso de falta de estanqueidad de una celda, el líquido vertido no debe entrar en contacto con la piel ni los ojos. Si se produce contacto, lavar con agua abundante la zona afectada y avisar a un médico.
6. En caso de cambio o recarga inadecuados, las celdas o baterías que contienen electrolitos alcalinos (p. ej. las celdas de litio) pueden explotar. Para garantizar la seguridad del producto, las celdas o baterías solo deben ser sustituidas por el tipo Rohde & Schwarz correspondiente (ver lista de recambios).
7. Las baterías y celdas deben reciclarse y no deben tirarse a la basura doméstica. Las baterías o acumuladores que contienen plomo, mercurio o cadmio deben tratarse como residuos especiales. Respete en esta relación las normas nacionales de eliminación y reciclaje.

Transporte

1. El producto puede tener un peso elevado. Por eso es necesario desplazarlo o transportarlo con precaución y, si es necesario, usando un sistema de elevación adecuado (p. ej. una carretilla elevadora), a fin de evitar lesiones en la espalda u otros daños personales.

2. Las asas instaladas en los productos sirven solamente de ayuda para el transporte del producto por personas. Por eso no está permitido utilizar las asas para la sujeción en o sobre medios de transporte como p. ej. grúas, carretillas elevadoras de horquilla, carros etc. Es responsabilidad suya fijar los productos de manera segura a los medios de transporte o elevación. Para evitar daños personales o daños en el producto, siga las instrucciones de seguridad del fabricante del medio de transporte o elevación utilizado.
3. Si se utiliza el producto dentro de un vehículo, recae de manera exclusiva en el conductor la responsabilidad de conducir el vehículo de manera segura y adecuada. El fabricante no asumirá ninguna responsabilidad por accidentes o colisiones. No utilice nunca el producto dentro de un vehículo en movimiento si esto pudiera distraer al conductor. Asegure el producto dentro del vehículo debidamente para evitar, en caso de un accidente, lesiones u otra clase de daños.

Eliminación/protección del medio ambiente

1. Los dispositivos marcados contienen una batería o un acumulador que no se debe desechar con los residuos domésticos sin clasificar, sino que debe ser recogido por separado. La eliminación se debe efectuar exclusivamente a través de un punto de recogida apropiado o del servicio de atención al cliente de Rohde & Schwarz.
2. Los dispositivos eléctricos usados no se deben desechar con los residuos domésticos sin clasificar, sino que deben ser recogidos por separado.
   Rohde & Schwarz GmbH & Co.KG ha elaborado un concepto de eliminación de residuos y asume plenamente los deberes de recogida y eliminación para los fabricantes dentro de la UE. Para desechar el producto de manera respetuosa con el medio ambiente, diríjase a su servicio de atención al cliente de Rohde & Schwarz.
3. Si se trabaja de manera mecánica y/o térmica cualquier producto o componente más allá del funcionamiento previsto, pueden liberarse sustancias peligrosas (polvos con contenido de metales pesados como p. ej. plomo, berilio o níquel). Por eso el producto solo debe ser desmontado por personal especializado con formación adecuada. Un desmontaje inadecuado puede ocasionar daños para la salud. Se deben tener en cuenta las directivas nacionales referentes a la eliminación de residuos.
4. En caso de que durante el trato del producto se formen sustancias peligrosas o combustibles que deban tratarse como residuos especiales (p. ej. refrigerantes o aceites de motor con intervalos de cambio definidos), deben tenerse en cuenta las indicaciones de seguridad del fabricante de dichas sustancias y las normas regionales de eliminación de residuos. Tenga en cuenta también en caso necesario las indicaciones de seguridad especiales contenidas en la documentación del producto. La eliminación incorrecta de sustancias peligrosas o combustibles puede causar daños a la salud o daños al medio ambiente.

Se puede encontrar más información sobre la protección del medio ambiente en la página web de Rohde & Schwarz.

Quality management and environmental management

Certified Quality System
ISO 9001

Certified Environmental System
ISO 14001

Sehr geehrter Kunde,
Sie haben sich für den Kauf eines Rohde&Schwarz Produktes entschieden. Sie erhalten damit ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unserer Qualitäts- und Umweltmanagementsysteme entwickelt, gefertigt und geprüft. Rohde&Schwarz ist unter anderem nach den Managementsystemen ISO 9001 und ISO 14001 zertifiziert.

Der Umwelt verpflichtet
- Energie-effiziente, RoHS-konforme Produkte
- Kontinuierliche Weiterentwicklung nachhaltiger Umweltkonzepte
- ISO 14001-zertifiziertes Umweltmanagementsystem

Dear customer,
You have decided to buy a Rohde&Schwarz product. This product has been manufactured using the most advanced methods. It was developed, manufactured and tested in compliance with our quality management and environmental management systems. Rohde&Schwarz has been certified, for example, according to the ISO 9001 and ISO 14001 management systems.

Environmental commitment
- Energy-efficient products
- Continuous improvement in environmental sustainability
- ISO 14001-certified environmental management system

Cher client,
Vous avez choisi d'acheter un produit Rohde&Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests de ce produit ont été effectués selon nos systèmes de management de qualité et de management environnemental. La société Rohde&Schwarz a été homologuée, entre autres, conformément aux systèmes de management ISO 9001 et ISO 14001.

Engagement écologique
- Produits à efficience énergétique
- Amélioration continue de la durabilité environnementale
- Système de management environnemental certifié selon ISO 14001

ROHDE&SCHWARZ
1171.0200.11 V 05.01
1171020011

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com

ROHDE&SCHWARZ

1171.0200.22-06.00

Contents

1 System Overview 7

1.1 System Components 7

1.1.1 R&S TSMA Base Unit 7

1.1.2 R&S TSMA-BP Battery Pack Unit - Optional Unit 8

1.1.3 R&S TSMA Carrying Bag - Optional Unit 9

1.2 The R&S TSMA Option Concept 9

1.2.1 Technology Options 9

1.2.1.1 Option TD-SCDMA (R&S TSMA-K20) 10

1.2.1.2 Option WCDMA (R&S TSMA-K21) 10

1.2.1.3 Option CDMA2000 (R&S TSMA-K22) 10

1.2.1.4 Option GSM (R&S TSMA-K23) 10

1.2.1.5 Option 1xEV-DO (R&S TSMA-K24) 10

1.2.1.6 Option RF Power Scan (R&S TSMA-K27) 10

1.2.1.7 Option WiMax (R&S TSMA-K28) 11

1.2.1.8 Option TETRA (R&S TSMA-K29) 11

1.2.1.9 Option LTE-MIMO (R&S TSMA-K30) 11

1.2.1.10 Option LTE Downlink Allocation Analyzer (R&S TSMA-K31) 11

1.2.1.11 Option Automatic Channel Detection (R&S TSMA-K40) 11

1.2.2 Band Options 11

1.3 Front and Rear Panel Description 12

1.3.1 Front Panel 12

1.3.2 Rear Panel 13

2 Preparing for Use 17

2.1 Unpacking the Instrument 17

2.2 Connecting Power Supply 18

2.2.1 Connecting a DC Power Supply 18

2.2.2 Connecting a AC Power Supply 19

2.2.3 Connecting the R&S TSMA-BP Battery Pack Unit 19

2.3 Accessing the R&S TSMA 22

3 Initial Instrument Settings 24

3.1 Measurement Setup 24

3.2 Connection Setup for QualiPoc® 24
3.3 Configuration via Web Interface 27
3.3.1 Overview 27
3.3.2 System 28
3.3.2.1 Configuration Tab 28
3.3.2.2 Scanner Info Tab 29
3.3.2.3 Active Scan Options Tab 30
3.3.2.4 Inactive Scan Options Tab 30
3.3.2.5 Band Configuration Tab 30
3.3.2.6 Install Options 30
3.3.3 Connectivity 31
3.3.3.1 Bluetooth Tab 31
3.3.3.2 WLAN Tab 31
3.3.3.3 LAN Tab 32
3.3.4 File Transfer Tab 32
4 Troubleshooting 33
4.1 The R&S TSMA could not be accessed from a PC via LAN port 33
4.2 The Scanner Unit could not be accessed from Software (R&S ROMES, R&S NESTOR) 34
4.3 No Navigation Data in R&S ROMES / R&S NESTOR 35
4.4 No RF Data 36
4.5 Sample App on Smart Phone could not connect with R&S TSMA 36
4.6 Check the Connection between Scanner Unit and CPU Unit 37
5 Introduction to rViCom App 38
5.1 Overview 38
5.2 Requirements 38
5.2.1 General Requirements 38
5.2.2 Specific Requirements 38
5.3 Usage 39
5.3.1 Connection Establishment 39
5.3.1.1 Connection Type Selection 39
5.3.1.2 Server Discovery 39
5.3.2 GSM RSSI Scan 41

5.3.2.1 GSM Preferences....41
5.3.2.2 GSM Scan Results....42
5.3.3 WCDMA Top-N Pilot Scan....43
5.3.3.1 WCDMA Top-N Pilot Preferences....43
5.3.3.2 WCDMA Top-N Pilot Scan Results....44
5.3.4 LTE Top Signal Scan....44
5.3.4.1 LTE Top Signal Preferences....44
5.3.4.2 LTE Top Signal Scan Results....45
5.3.5 Throughput Test Case....46
5.3.5.1 Throughput Preferences....46
5.3.5.2 Throughput Results....47
5.3.6 RF Power Scan....47
5.3.6.1 RF Power Scan References....47
5.3.6.2 RF Power Scan Results....48

Glossary: Abbreviations....50

Index....52

1 System Overview

As in-building traffic in cellular networks grows, there is an increased need for indoor measurements. While traditional drive test systems consist of a laptop with test mobile phones and scanners, there are also walk test solutions that use tablets and smartphones.

The R&S TSMA enhances such solutions, providing the user with accurate insight into the RF environment.

The R&S TSMA combines the technology of the R&S TSME ultra-compact drive test scanner with a high performance Intel processor. The scanner can run PC based drive test software, and smartphones can be connected via USB. The scanner measures up to eight technologies simultaneously in the 350 MHz to 4400 MHz wireless communications bands. It can be combined with an R&S TSME to perform LTE MIMO measurements.

Key Features

- User-defineable input frequency range from 350 MHz to 4400 MHz
- RF and signal processing path with a bandwidth of 20 MHz
- Parallel measurement of all technologies in all bands (up to eight technologies simultaneously)
- Integrated Intel PC with Microsoft® Windows operating system which allows to install any drive test software supporting the R&S TSMA (e.g R&S ROMES)
- Open remote ViCom interface in order to integrate into Windows and Android based software tools.
- Automatic detection of active channels in a specified band (Automatic Channel Detection (ViCom only),R&S TSMA-K40, Order No. 1524.6339.02 or R&S ROMES4ACD)
- Analysis of the DL allocations of the strongest eNodeBs during measurement (LTE Downlink Allocation Analyzer, R&S TSMA-K31, Order No. 1524.6322.02)

1.1 System Components

1.1.1 R&S TSMA Base Unit

The R&S TSMA base unit consists of the following components:

- R&S TSME drive test scanner unit
- Integrated Intel PC with a high-performance i5 processor and an embedded Microsoft Windows Operating System (Windows 7, 64 bit).
- Internal SSD ensuring high data processing speeds and sufficient memory (128 GByte) for measurement data.

Equipment	Availability
Antennas	• GPS: active antenna with cable and SMA connector included in package • RF antenna: 700 MHz to 2600 MHz paddle antenna included in package • optionally: R&S TSME accessory antennas: – TSME-ZA1 (1506.9817.02): Antenna-mount magnetic – TSME-ZA2 (1506.9823.02): Antenna-mount fixed – TSME-ZA3 (1506.9830.02): Antenna-mount magnetic with GPS – TSME-ZA4 (1506.9846.02): Antenna-mount fixed with GPS – TSMW-ZE8 (1506.9852.02): Antenna Emitter 698 MHz - 2700 MHz – TSMW-ZE2 (1117.8165.00): Antenna Emitter 406 MHz - 440 MHz – TSME-ZE7 (1519.5709.02): Antenna Emitter 380 MHz - 430 MHz
Connection cables	• DC power supply cable with a cigarette lighter connector (included in package) • LAN cable to connect host PC (RJ45 Patch cable CAT6 2m, included in package) • LAN cable to connect scanner unit and internal PC unit (5016.1890.00, included in package)
AC Power supply	TSMA-Z1 (1523.8450.02), optional
Battery Pack and Batteries	R&S TSMA-BP (1523.8009.02), optional R&S TSMA-BAT (1523.8021.03), optional
Carrying Bag	R&S TSMA-ZCB (1523.8467.02), optional

1.1.2 R&S TSMA-BP Battery Pack Unit - Optional Unit

The R&S TSMA-BP Battery Pack Unit features two rechargeable hot-swappable batteries (R&S TSMA-BAT, 1523.8021.03), which can be charged directly if the battery pack is connected to an external power supply. Alternatively, a separate battery charger (R&S TSMA-BC2, 1523.8015.02) can be used for recharging the batteries.

Fig. 1-1: R&S TSMA with R&S TSMA-BP battery pack unit (containing two batteries)

Only Li-ion battery of the type RRC2054 may be used!

The recharging of the batteries is only allowed via the the separate charger (R&S TSMA-BC2, 1523.8015.02) or via an external power supply. In this case, the batteries must be inside the R&S TSMA.

1.1.3 R&S TSMA Carrying Bag - Optional Unit

The optional carrying bag accommodates the R&S TSMA with battery pack, two spare batteries, a mobile phone, and the R&S TSME-Z7 antenna (frequency range: 700 MHz to 2.6 GHz).

1.2 The R&S TSMA Option Concept

The R&S TSMA scanner consists of the R&S TSMA hardware as well as a set of (specified) technology and band options when it comes from the factory.

1.2.1 Technology Options

Technology options allow the R&S TSMA to scan the input based on a specific technology, for example, LTE. All technology options can be installed on the same instrument; the R&S TSMA can measure various technologies simultaneously.

Following technology options are available:

Option	Order Number	Description
R&S TSMA-K20	1524.6080.02	R&S TSMA scanner option: TD-SCDMA
R&S TSMA-K21	1524.6097.02	R&S TSMA scanner option: WCDMA
R&S TSMA-K22	1524.6100.02	R&S TSMA scanner option: CDMA2000
R&S TSMA-K23	1524.6116.02	R&S TSMA scanner option: GSM
R&S TSMA-K24	1524.6122.02	R&S TSMA scanner option: 1xEV-DO
R&S TSMA-K27	1524.6151.02	R&S TSMA scanner option: RF Power Scan
R&S TSMA-K28	1524.6168.02	R&S TSMA scanner option: WiMAX
R&S TSMA-K29	1524.6174.02	R&S TSMA scanner option: TETRA
R&S TSMA-K30	1524.6197.02	R&S TSMA scanner option: LTE-MIMO
R&S TSMA-K31	1524.6322.02	R&S TSMA scanner option: LTE Downlink Allocation Analyzer
R&S TSMA-K40	1524.6339.02	R&S TSMA scanner option: Automatic Channel Detection

1.2.1.1 Option TD-SCDMA (R&S TSMA-K20)

The R&S TSMA-K20 option allows for the instrument to be used as a TD-SCDMA scanner. Hence the instrument can measure and identify all TD-SCDMA downlink (BTS) signals in the air.

1.2.1.2 Option WCDMA (R&S TSMA-K21)

The R&S TSMA-K21 option allows for the instrument to be used as a WCDMA scanner. With this option the instrument can measure and identify all WCDMA downlink (Node B and BTS) signals in the air. The main purpose of these measurements is to test the receiving conditions of a mobile device in a WCMDA network and to analyze possible interferences. During the subsequent spectrum analysis, a frequency sweep over a specified range is performed to detect arbitrary WCDMA downlink and uplink signals.

1.2.1.3 Option CDMA2000 (R&S TSMA-K22)

The R&S TSMA-K22 option allows for the instrument to be used as a CDMA2000 scanner. Hence the instrument can measure and identify all CDMA2000 downlink (BTS) signals in the air.

1.2.1.4 Option GSM (R&S TSMA-K23)

TheR&S TSMA-K23 option allows for the instrument to be used as a GSM scanner. With this option the instrument can measure and identify all GSM downlink (Node B and BTS) signals in the air. The main purpose of these measurements is to test the receiving conditions of a mobile device in a GSM network and to analyze possible interferences.

1.2.1.5 Option 1xEV-DO (R&S TSMA-K24)

The R&S TSMA-K24 option allows for the instrument to be used as a 1xEV-DO scanner. Hence the instrument can measure and identify all 1xEV-DO downlink (BTS) signals in the air.

1.2.1.6 Option RF Power Scan (R&S TSMA-K27)

TheR&S TSMA-K27 option allows for the instrument to be used as a power scanner. With this option the instrument can measure throughout the entire frequency range from 350 MHz to 4400 MHz. As a result, mobile radio bands as well as the uplink ranges can be measured, and detecting interference on the uplink frequencies becomes very easy. Results of the RF Power scans can be displayed in R&S ROMES within the corresponding RF Power Scanner Spectrum view.

1.2.1.7 Option WiMax (R&S TSMA-K28)

The R&S TSMA-K28 option allows for the instrument to be used as a WiMAX scanner. With this option the instrument detects each and every available WiMAX signal with sensitivity below the noise level. Therefore it can check neighborhood information, and also identify interference signals from remote base stations.

1.2.1.8 Option TETRA (R&S TSMA-K29)

The R&S TSMA-K26 option allows for the instrument to be used as a TETRA scanner. With this option the instrument can measure and identify all TETRA downlink (BTS) signals in the air. The main purpose of this measurement is to test the receiving conditions of a mobile device in a TETRA network and to analyze possible interferences and find possible gaps in the coverage.

1.2.1.9 Option LTE-MIMO (R&S TSMA-K30)

The R&S TSMA-K30 option allows for the instrument to be used as a LTE-MIMO scanner. In order to fulfill the requirements for this option, an R&S TSME must be connected to the R&S TSMA.

1.2.1.10 Option LTE Downlink Allocation Analyzer (R&S TSMA-K31)

The R&S TSMA-K31 option allows to analyze the DL allocations of the strongest eNodeBs during the measurement. The analysis information includes the following values:

- Number of RNTIs (Radio Network Temporary Identifier) that have been scheduled data by the eNodeB
- MCS (Modulation and Coding Scheme) and throughput for each detected UE
- Occupation of the cell

The information is provided per TTI (Transmission Time Interval) and per resource block.

The offered data is helpful during network optimization and troubleshooting as it helps users to acquire network data without accessing O&M network information such as base station counters.

1.2.1.11 Option Automatic Channel Detection (R&S TSMA-K40)

The R&S TSMA-K40 option allows the R&S TSMA to detect active channels in a specified band automatically. In combination with a spectrum scan, the detection process can be significantly speed up.

1.2.2 Band Options

TheR&S TSMA hardware simultaneously measures in all wireless communications bands from 350 MHz to 4.4 GHz. Using band licenses, more cost-efficient configura-

tions are available for applications where only a limited number of bands need to be measured simultaneously. These configurations limit the number of bands that can be measured in parallel. Users can reconfigure the bands for each measurement as desired.

Upgrade options are available to increase the bandwidth of the R&S TSMA from a limited number of bands to full bandwidth.

Following band options are available:

Option	Order Number	Description
R&S TSMA-KAB	1524.6297.02	All bands measured simultaneously
R&S TSMA-K1B	1524.6068.02	1 band measured simultaneously
R&S TSMA-K2B	1524.6180.02	2 bands measured simultaneously
R&S TSMA-K3B	1524.6200.02	3 bands measured simultaneously
R&S TSMA-K4B	1524.6216.02	4 bands measured simultaneously
R&S TSMA-K5B	1524.6222.02	5 bands measured simultaneously
R&S TSMA-KUB	1524.6300.02	Upgrade: 1 additional band measured simultaneously

1.3 Front and Rear Panel Description

1.3.1 Front Panel

The front panel of the R&S TSMA does not provide any connectors or control elements for operation.

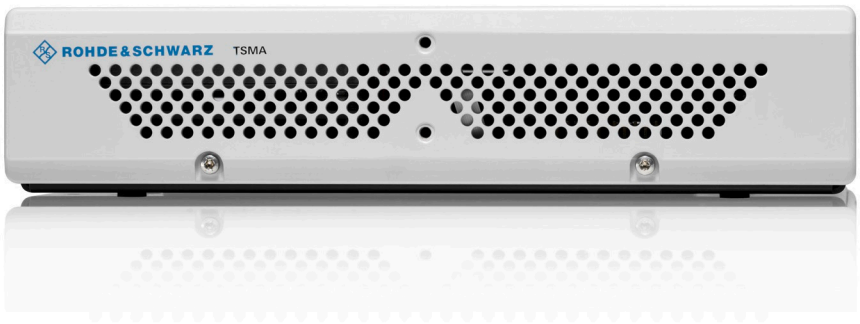

Fig. 1-2: R&S TSMA - Front Panel

1.3.2 Rear Panel

The following figure provides an overview of the control elements and the connectors on the rear panel of the instrument.

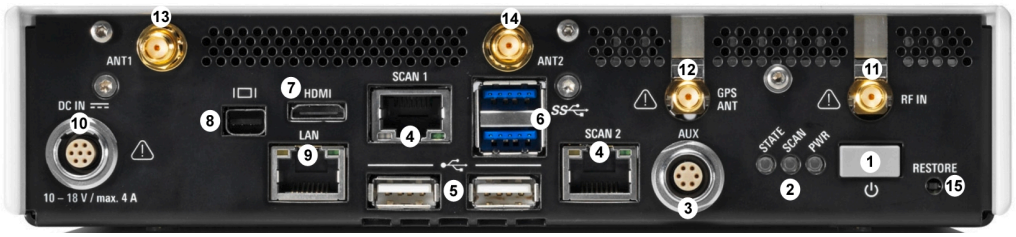

Fig. 1-3: R&S TSMA - Rear Panel

1 = POWER ON/OFF
2 = STATUS LEDs
3 = AUX Connector
4 = SCAN (2x)
5 = USB 2.0 (2x)
6 = USB 3.0 (2x)
7 = mini HDMI
8 = MINI Display Port
9 = LAN Connector
10 = DC IN Connector
11 = RF IN Connector
12 = GPS Antenna Connector
13 = Antenna 1 Connector (Bluetooth / WLAN MIMO)
14 = Antenna 2 Connector (WLAN)
15 = RESTORE

POWER ON/OFF

The POWER ON/OFF key turns on and off the device if power is supplied via the DC IN connector.

STATUS LEDs

The three status LEDs, STATE, SCAN, PWR, indicate the operating status of the R&S TSMA.

	LED	STATE
PWR	blue blinking	The device is in stand-by mode.
	blue	The power is on.

	LED	STATE
SCAN	red (< 5s), then off	Selftest passed
	green	Connected to software
	green blinking, 1 Hz	System is measuring
	green blinking, 5 Hz	Instrument is being identified by the software

	LED	STATE
	red blinking, 1 Hz	Warning
	red, continuous	Error

	LED	STATE
STATE	green blinking	Shut down in progress.

AUX Connector

The AUX connector can be used to to synchronize the TSMA with the external 10 MHz reference frequency output of a signal generator or to synchronize multiple TSMA/ TSME with the Sync cable.

SCAN (2x)

The two SCAN connectors are used to establish a highspeed data link between the R&S TSMA scanner unit (SCAN connector on the right side) and the R&S TSMA internal PC unit (SCAN connector on the left side).

Use only the LAN interconnection cable (R&S No. 5016.1890.00) for connecting the SCAN ports.

The LEDs on the SCAN connectors display the status of the interconnection.

Table 1-1: SCAN LED1 states and their meaning

LED state	Description
off	No connection
green, blinking	Identifying connected device
green	Connection established

Table 1-2: SCAN LED2 states and their meaning

LED state	Description
off	No connection
green, blinking	Identifying connected device
green	Connection established; receiving good frame (valid data) or sending
yellow	Connection error; bad frame received (invalid data)

USB 2.0 (2x)

The two USB 2.0 ports can be used for connecting external devices as keyboard, mouse or other devices.

The length of the connected USB cables should not exceed 3 m.

USB 3.0 (2x)

The two USB 3.0 ports can be used for connecting external storage devices, data sticks and test mobiles.

The length of the connected USB cables should not exceed 3 m.

Mini-HDMI Port

The MINI-HDMI port can be used for connecting an external monitor. (Resolution: 2560x1600 px)

MINI-Display Port

The MINI-Display port can be used for connecting an external monitor. (Resolution: 5120x2880 px)

LAN

The LAN connector provides a highspeed 100 Mbit Ethernet interface with an RJ 45 connector using IPv4. It is used to connect the R&S TSMA to a host PC in a local network.

The LAN interface is only used for Remote Control / Remote Desktop Connections. In this case, the device must not be in the "Scanner Only" mode.

The LEDs on the LAN connector indicate the status of the connection to the host PC. LED 1 (yellow, link status) is on the left side of the connector, LED 2 (green, activity status) is on the right.

DC IN Connector

The DC IN connector is required for the DC power supply (11-18 V, max. 4 A).

Use only cable type with R&S No. 1523.7948.00 (included in package).

RF IN Connector

The multi-band RF paddle antenna (700 MHz to 2.6 GHz), which is included in the shipment of R&S TSMAor the device providing the RF signal is connected to the instrument's RF INPUT via a cable equipped with an appropriate connector (SMA female, 50 Ω input impedance, VSWR type 2.0).

For the multi-band RF paddle antenna (700 MHz to 2.6 GHz) no adapter is required.

NOTICE

Risk of instrument damage

Do not overload the maximum allowed input of 20 dBm.

Non-compliance destroys the input mixer.

GPS ANT

An SMA connector is provided for the supplied external active GPS patch antenna. (Output power of the antenna port: 3V, max. 25mA)

Antenna Connector 1 BT

The connector with the label "1 BT" is required for connecting the antenna used for Bluetooth.

Antenna Connector 2 WLAN

The connector with the label "2))" is required for connecting the antenna used for WLAN.

RESTORE

With the RESTORE button it is possible to reset the system partition R&S TSMA to the delivery state in case of a software conflict or boot problems.

In order to perform a restore, the RESTORE button must be pressed (more than 5 secs) with a sharp object (e.g. pen).

Perform the RESTORE only with connected mouse, keyboard and monitor.

NOTICE

Data loss after RESTORE

After a successful restore, all user date stored on the data partition are lost.

2 Preparing for Use

WARNING

Risk of injury and instrument damage

The instrument must be used in an appropriate manner to prevent electric shock, fire, personal injury, or damage.

- Do not open the instrument casing.
- Read and observe the "Basic Safety Instructions" delivered as a printed brochure with the instrument or in electronic format on the documentation CD-ROM.
  In addition, read and observe the safety instructions in the following sections.
  Notice that the data sheet may specify additional operating conditions.

NOTICE

Risk of instrument damage during operation

An unsuitable operating site or test setup can cause damage to the instrument and to connected devices. Ensure the following operating conditions before you switch on the instrument:

- The instrument is dry and shows no sign of condensation.
- The instrument is positioned as described in the following sections.
- Signal levels at the input connectors are all within the specified ranges.

EMI Suppression

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

2.1 Unpacking the Instrument

The following section describes how to set up the instrument.

NOTICE

Risk of instrument damage

Note that the general safety instructions also contain information on operating conditions that will prevent damage to the instrument. The instrument's data sheet may contain additional operating conditions.

Check the equipment for completeness using the delivery note and the accessory lists for the various items. Check the instrument for any damage. If there is damage, immediately contact the carrier who delivered the instrument. Make sure not to discard the box and packing material.

Packing material

Retain the original packing material. If the instrument needs to be transported or shipped at a later date, you can use the material to protect the control elements and connectors.

Accessory list

The following items are included with shipment of the R&S TSMA:

- 12 V DC power supply cable with a cigarette lighter connector
- LAN interconnection cable (SCAN <-> SCAN)
- Active GPS patch antenna
- Wide range RF paddle antenna (700 MHz to 2600 MHz)
- Two stub antennas for WLAN/Bluetooth

2.2 Connecting Power Supply

This section describes how to connect the R&S TSMA to a power supply unit.

In general, the TSMA boots immediately when it is connected to any type of power supply.

2.2.1 Connecting a DC Power Supply

The DC power supply connector is on the rear panel of the unit. A DC power input range from 11 V to 18 V is supported.There is no need to set the used voltage manually.

NOTICE

Device Damaged

The R&S TSMA is to be used with a 12 V vehicle power suppy only.

DC-based lab networks are not allowed to be used.

2.2.2 Connecting a AC Power Supply

In order to operate the R&S TSMA with an AC power supply, connect theR&S TSMA base unit with the AC power supply (R&S TSMA-Z1, R&S No. 1523.8450.02).

Use only the R&S TSMA-Z1, R&S No. 1523.8450.02 as AC power supply.

Alternatively, it is possible to connect the R&S TSMA via the R&S TSMA-BP Battery Pack Unit with the AC power supply. For details, see chapter 2.2.3, "Connecting the R&S TSMA-BP Battery Pack Unit", on page 19.

2.2.3 Connecting the R&S TSMA-BP Battery Pack Unit

In order to use the R&S TSMA with the battery pack, the following steps must be performed.

The R&S TSMA may be used only with closed battery cover.

1. Connect the R&S TSMA with the battery pack.

Fig. 2-1: Connection of R&S TSMA with R&S TSMA-BP Battery Pack Unit

1 = R&S TSMA Base Unit
2 = R&S TSMA-BP Battery Pack Unit
3 = Lock

2. Via the cable (3), you have to connect the DC IN connector on the R&S TSMA (1) with the TSMA connector (7 pins) on the battery pack (2).

Fig. 2-2: Cabling of R&S TSMA with R&S TSMA-BP Battery Pack Unit

1 = DC IN Connector R&S TSMA Base Unit
2 = TSMA Connector R&S TSMA-BP Battery Pack Unit
3 = Interconnection Cable (R&S TSMA Base Unit <-> R&S TSMA-BP Battery Pack Unit)

Note: The cable (3) is included in the delivery package.
The cable plugs are marked at both sides with a red spot.

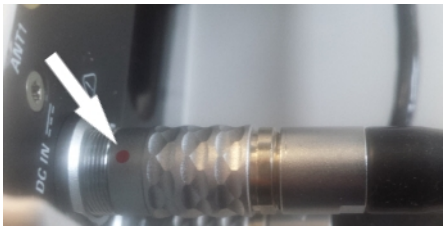

Fig. 2-3: Cable

Connected at the DC IN (1) of the R&S TSMA, this red spot must face upwards, at the TSMA connector (2) of the R&S TSMA it must face downwards.

The R&S TSMA boots as soon as the R&S TSMA-BP Battery Pack Unit (including charged batteries or connected to an external DC power supply) is connected with the R&S TSMA via the connection cable (3).

In order to connect the R&S TSMA via the R&S TSMA-BP Battery Pack Unit with an AC power supply, the following steps must be performed.

1. Connect the R&S TSMA Base Unit (1) with the R&S TSMA-BP Battery Pack Unit (2) using the connection cable (3).
2. Connect the DC connector (4) of the R&S TSMA-BP Battery Pack Unit with the adapter cable (5).

   Note: The adapater cable is a standard accessory of the R&S TSMA-BP Battery Pack Unit
3. Connect the adapter cable (5) with the AC power supply (R&S TSMA-Z1, R&S No. 1523.8450.02).

Fig. 2-4: Connecting the R&S TSMA with a AC power supply

1 = DC IN Connector R&S TSMA Base Unit
2 = TSMA Connector R&S TSMA-BP Battery Pack Uni
3 = Inter Connection Cable (R&S TSMA Base Unit <-> R&S TSMA-BP Battery Pack Unit
4 = DC IN Connector R&S TSMA-BP Battery Pack Unit
5 = Adapter cable (TSMA-Z1 <-> Battery Pack DC IN)
6 = DC OUT (AC Power supply TSMA-Z1)

2.3 Accessing the R&S TSMA

The access to the R&S TSMA device can be realized via the following possibilities:

Access directly using Windows operating system of the PC unit of the R&S TSMA

- Via a local monitor
  Connect an external monitor, a mouse and a keyboard and operate the R&S TSMA as an ordinary PC.
- Via a remote desktop connection
  Establish a remote desktop connection to the R&S TSMA device via an external PC Unit.

Access via interfaces provided by Rohde & Schwarz

- Via Remote ViCom
  Establish a WLAN or Bluetooth connection to the R&S TSMA device via a smartphone/tablet PC (Android) and start the Remote ViCom app.
- Via Web Interface
  Establish a WLAN connection, start a web-browser and open the web interface of the R&S TSMA (see step 3)

3 Initial Instrument Settings

3.1 Measurement Setup

In order to start a first measurement with the R&S TSMA, the following steps must be performed.

1. The R&S TSMA must be connected with a power supply (see chapter 2.2, "Connecting Power Supply", on page 18).

   After a power supply connection is established the device will be booted (Autostart).

   Note: In order to bring the device in the *Scanner Only* mode, press the POWER ON/OFF button for at least 2 seconds.

2. Via a tablet PC or smartphone (Android), you have to establish a WLAN connection.

   a) Search for a WLAN network. The WLAN server on the R&S TSMA has been started automatically during the boot process of the device.
   b) Connect your tablet or smartphone with the WLAN network. The required information can be found on a label on the bottom side of the R&S TSMA base unit.
   WLAN-Access Point SSID: *TSMA-xxxxxx*
   Key: *instrument*

   The WLAN connection between the tablet PC or smartphone and the R&S TSMA device is established.

3. On the tablet PC or smartphone start a web browser and enter the following URL: *http://192.168.1.10/*

   The configuration web GUI of the R&S TSMA will be started. For details about the web GUI, see chapter 3.3, "Configuration via Web Interface", on page 27.

4. Install the sample app on your tablet PC or smartphone. The sample app is available via the following sources.

   - Download via the start page of the web GUI
   - Download via the R&S support website http://www.rohde-schwarz.com/en/software/tsma/

3.2 Connection Setup for QualiPoc®

In order to use the R&S TSMA with QualiPoc®, the following steps must be performed.

1. Turn on the R&S TSMA.

2. Check the "Mode of Operation" (see chapter 3.3.2.1, "Configuration Tab", on page 28).
   a) If the "Mode of Operation" is *Normal PC Mode*, then continue with step 3.
   b) If the "Mode of Operation" is different from *Normal PC Mode*, then change to *Normal PC Mode*.
   The R&S TSMA reboots automatically.
3. Start the web interfacte and activate the Bluetooth adapter (see chapter 3.3.3.1, "Bluetooth Tab", on page 31).
4. Change the "Mode of Operation" to *Diversity*. (See chapter 3.3.2.1, "Configuration Tab", on page 28.)
   The R&S TSMA reboots automatically.
5. In QualiPoc®, touch the main menu, and then touch "Device manager".
6. Touch the plus sign (+) at the top of the screen and touch "NCM".

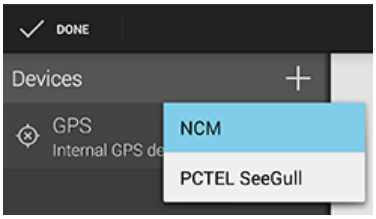

Fig. 3-1: Add NCM

Note: The NCM provides the bluetooth connection to the scanner.

7. Touch "Scan" at the top of the screen and wait until the scanning process stops.

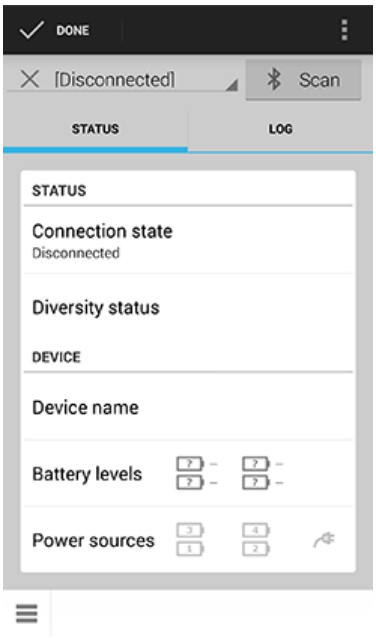

Fig. 3-2: Scan for NCM

8. Touch "[Disconnected]", touch the TSMA scanner in the list, for example, "TSMA-900012", and then touch to accept the pairing request.

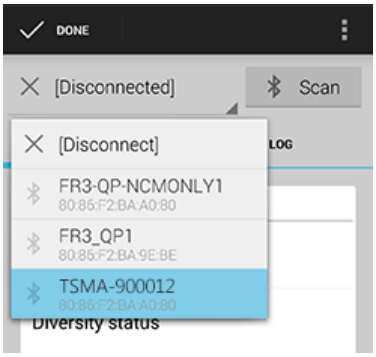

Fig. 3-3: Pair NCM

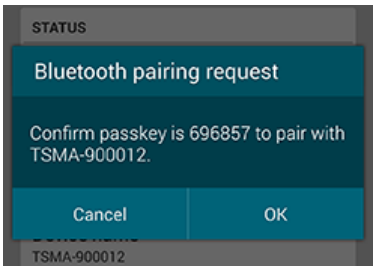

Fig. 3-4: Bluetooth pairing request

9. Touch the scanner again in the list to connect to the scanner.
10. Touch the context menu icon ⋮ and touch "Start scanner detection".

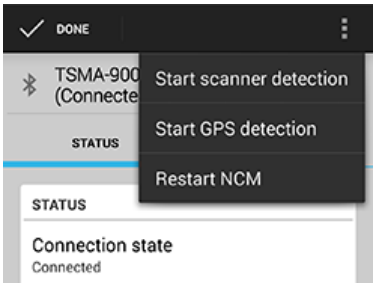

Fig. 3-5: Start scanner detection

The scanner appears in the "Devices" list upon successful detection.

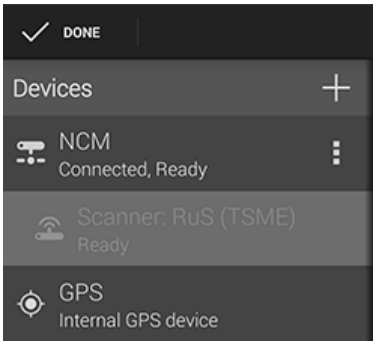

Fig. 3-6: Scanner ready

For more details about the QualiPoc configuration and usage, refer to the user documentation for QualiPoc®.

3.3 Configuration via Web Interface

In order to start the web interface for configuration tasks, open a browser on your PC, tablet PC or smartphone and enter the following URL:

http://192.168.1.10/

The web GUI offers the following pages for configuration tasks:

- Overview
- System
- Connectivity
- File Transfer

3.3.1 Overview

The "Overview" window displays the following basic settings of the R&S TSMA.

- Instrument Model
  Displays the type of instrument
- Material Number
  Displays the R&S No. of the device
- Serial Number
  Displays the serial number of the R&S TSMA device
- Software Version
  Displays the current software version of the R&S ViCom server
- Computer Name
  Displays the computer name of the R&S TSMA (read-only). The host name has always the same structure.
  Example: `TSMA-900001`
- Hardware Version

Displays the current hardware version

- Image Version
  Displays the current image version
- Firmware Revision
  Displays the current firmware revision
- IP Address Remote Port
  Displays the IP address of the remote LAN port of the R&S TSMA.
- IP Address Scanner Port
  Displays the IP address of the scanner port of the R&S TSMA
- IP Address WLAN AP
  Displays the IP address of the WLAN access point.
- Mode of Operation
  Displays the mode how the device is used. In order to change the mode of operation, see chapter 3.3.2.1, "Configuration Tab", on page 28.
- Bluetooth Status
  Displays the Bluetooth activity status. In order to change the status, see chapter 3.3.3.1, "Bluetooth Tab", on page 31.
- WLAN Status
  Displays the WLAN activity status. In order to change the status, see chapter 3.3.3.2, "WLAN Tab", on page 31.
- Battery 1
  Displays the charge of battery 1.
- Battery 2
  Displays the charge of battery 2.
- Remaining Battery Time
  Displays the estimated remaining battery time
- Mainboard Temperature
  Displays the current temperature of the mainboard.

3.3.2 System

The "System" window consists of the following tabs.

- Configuration
- Scanner Info
- Active Scan Options
- Inactive Scan Options
- Band Configuration
- Install Options

3.3.2.1 Configuration Tab

In the "Configuration" tab the buzzer and the mode of operation can be configured.

- Buzzer

With the buzzer, it possible to activate an acoustic warning signal, indicating that the charge of battery is low.
  – Buzzer Status
    Allows to activate or decativate the buzzer.
  – Buzzer Volume
    Allows to specify the volume of the acoustic warning signal.

- Mode of Operation
  With the Mode of Operation, the autostart sequence of the R&S TSMA can be adjusted in order to change the usage of the R&S TSMA.
  – ViCom (default mode)
    If you use the ViCom mode, the R&S TSMA is booted and the Remote ViCom Server will be started.
  – Diversity
    If you use the Diversity mode, the Diversity application will be started (if installed). This mode is also required if the R&S TSMA will be used together with QualiPoc®.
  – Normal PC Mode
    If you use the normal PC mode, Windows 7 is booted on the R&S TSMA device.

Click "Submit", to save the selection.

3.3.2.2 Scanner Info Tab

The "Scanner Info" tab displays the following information:

Device

- MAC Address
  Displays the MAC address of the scanner port

FPGA

- Available FPGA Versions
  Displays the vailable FPGA versions (max. 4 versions).
- Current FPGA Versions
  Displays the current valid FPGA version

Controller Board

- Serial Number
  Displays the serial number of the controller board
- Product Charge Index
  Displays the product charge index of the controller board

RF Board

- Serial Number
  Displays the serial number of the RF board
- Product Charge Index

Displays the product charge index of the RF board

Correction Data

- Version
  Displays the version of the calibration data
- Date
  Displays the date of calibration
- TCXO Date
  Displays the date of the internal calibration

3.3.2.3 Active Scan Options Tab

The "Active Scan Options" tab displays the following information:

- Option Type
  Displays the type of the used option
- Option Material Number
  Displays the R&S No. of the option
- Activation Type
  Displays the type of activation
- Valid From
  Displays the start date of validity
- Valid Till
  Displays the end date of validity
- Option Index
  Displays the index numer of the option

3.3.2.4 Inactive Scan Options Tab

The "Inactive Scan Options" tab displays the same information as described for the "Active Options" (see chapter 3.3.2.3, "Active Scan Options Tab", on page 30).

3.3.2.5 Band Configuration Tab

The "Band Configuration" tab displays the following information:

- Current Configuration
  Displays the current valid band configuration
- New Configuration
  Displays the new band configuration

3.3.2.6 Install Options

The "Install Options" tab allows the following types of option installation:

- Install ViCom Options
  Allows to install a ViCom option by typing in the option code manually

- Install XML File
  Allows to install a ViCom option by selecting and installing an xml file

3.3.3 Connectivity

The "Connectivity" window consists of the following tabs:

- Bluetooth
- WLAN
- LAN

3.3.3.1 Bluetooth Tab

In the "Bluetooth" tab the settings in order to establish a Bluetooth connection can be configured.

- Bluetooth Connection
  Allows to specify the configuration details of a bluetooth adapter
  – Bluetooth Status
    Activate / Deactivate Bluetooth
  – Bluetooth Visibility
    Show / Hide the Bluetooth device
  – Select the Bluetooth Device you want to pair
    With "Refresh Device List", the list of active Bluetooth devices will be displayed.
    With "Connect" the pairing of Bluetooth devices can be established.

3.3.3.2 WLAN Tab

The "WLAN" tab the WLAN settings can be configured.

- WLAN
- WLAN Access Point
- WLAN TCP/IP Mode
  The IP address can be assigned automatically via DHCP or manually as fixed IP address.
  – WLAN IP Address (only active, if the TCP/IP mode is "Manual")
    Specify the IP address of the R&S TSMA
    Example: `192.168.1.11`
  – WLAN Subnet Mask (only active, if the TCP/IP mode is "Manual")
    Specify the subnet mask for the TSMA
    Example: `255.255.255.0`
  – WLAN Default Gateway (only active, if the TCP/IP mode is "Manual")
    Specify the default gateway
  – WLAN DNS Server(s) (only active, if the TCP/IP mode is "Manual")
    Specify the DNS server. It is possible to specify a primary and a secondary DNS server.
  – WLAN Dynamic Device Registration at DNS Server

With "Submit", the changes will be saved.

3.3.3.3 LAN Tab

In the "LAN" tab the LAN settings can be configured.

- LAN TCP/IP Mode
  The IP address can be assigned automatically via DHCP or manually as fixed IP address.
  - LAN IP Address (only active, if the TCP/IP mode is "Manual")
    Specify the IP address of the R&S TSMA
    Example: `192.168.1.11`
  - LAN Subnet Mask (only active, if the TCP/IP mode is "Manual")
    Specify the subnet mask for the TSMA
    Example: `255.255.255.0`
  - LAN Default Gateway (only active, if the TCP/IP mode is "Manual")
    Specify the default gateway
  - LAN DNS Server(s) (only active, if the TCP/IP mode is "Manual")
    Specify the DNS server. It is possible to specify a primary and a secondary DNS server.
  - LAN Dynamic Device Registration at DNS Server

  With "Submit", the changes will be saved.

3.3.4 File Transfer Tab

In the "File Transfer" tab file downloads and uploads from the R&S TSMA to a connected USB storage device can be configured.

Additionally, setups from a connected USB device can be selected and executed to upgrade the R&S TSMA software.

- Download File from TSMA
  Specifies the measurement data file (in the directory `/download`) which should be transferred from the R&S TSMA to a connected device.
- Select Setup File
  Specifies a setup file from a connected USB device which can be executed to upgrade the R&S TSMA software.
- Download TsmaSampleApp
  The TsmaSampleApp is part of the delivery and can be loaded on a remote mobile device (smartphone, tablet PC).
- Upload File to TSMA
  Specifies the file (e.g. workspace file) which should be transferred from a connected device to the R&S TSMA (in the directory `/upload`).

4 Troubleshooting

4.1 The R&S TSMA could not be accessed from a PC via LAN port

If no ethernet connection from the host PC could be established, check following issues:

- Check on the rear panel, if the LAN cable is connected to the "LAN" port.
- Check the setting of the R&S TSMA LAN port (see chapter 3.3.3.3, "LAN Tab", on page 32). The default setting is DHCP client.

Ping Command

To check, if the R&S TSMA is connected successfully, it is possible to perform the `ping` commando.

The `ping` command should be executed on the host PC.

1. Find out the IP address of the R&S TSMA via the web interface. The web interface can be started in two ways.
   - Start the Web Interface via WLAN
   - Start the Web Interface local on R&S TSMA (mouse, keyboard and monitor required).
     – Start the web browser (Internet Explorer)
     – The predefined start page is `http://localhost`.

   Note: If the web interface can not be started local, contact the R&S service.
2. Check if IP address and subnet mask of the LAN port corresponds with the settings on the host PC and correct these settings, if necessary.
3. Start the ping command again.
   Type in the command line window `ping <IP address of the R&S TSMA>` and wait for the answer.

   If the R&S TSMA does not answer, contact the system administrator or the R&S service.

Example:

```
C:\>ping 192.167.0.10
Pinging 192.167.0.10 with 32 bytes of data:
Reply from 192.167.0.10: bytes=32 time<1ms TTL=128
Reply from 192.167.0.10: bytes=32 time<1ms TTL=128
Reply from 192.167.0.10: bytes=32 time<1ms TTL=128
Reply from 192.167.0.10: bytes=32 time<1ms TTL=128
Ping statistics for 192.167.0.10:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

4.2 The Scanner Unit could not be accessed from Software (R&S ROMES, R&S NESTOR)

In order to check if the scanner unit is working properly, perform the following steps.

1. Check if the cabling between the SCAN ports is correct (see chapter 4.6, "Check the Connection between Scanner Unit and CPU Unit", on page 37).
2. Check the LEDs on SCAN ports.
   - The LED on the left side of the ports (yellow, link state) must light on both ports.
   - The LED on the right side of the ports (green, activity state) must flash on both ports.

   If one the LEDs does not work properly, contact the R&S service.
3. If the SCAN LED displaying the activity state is off, connect mouse, keyboard and monitor with the R&S TSMA.

   Note: If the SCAN LED displaying the activity state lights green or flashes green, stop the running measurement application (R&S NESTOR, R&S ROMES, R&S ViCom server).
4. Start the TSME Ping tool with the following command:
   "Start > All Programs > TsmeTools > Tsme Ping Utitlity"

   If the R&S TSMA is not found, contact the R&S service.
5. Open a web browser (Internet Explorer).
   The web interface will be started.
   - If "Scanner Info" is displayed in the web interface, continue with step 6.
   - If "Scanner Info" is not displayed in the web interface, remove the SCAN patch cable and connect the SCAN port (scanner part of the R&S TSMA) directly with a PC. Continue with step 7.
6. Start the TSME Device Manager with the following command.
   "Start > All Programs > TsmeTools > TsmeDeviceManager"

- If the R&S TSMA device is found, the Scanner unit works properly.
- If the R&S TSMA device is not found, contact the R&S service.

7. Switch off the R&S TSMA and activate the *Scanner only* by pressing the POWER ON/OFF button more than 2 s and less than 5 s.
8. Start the TSME Device Manager on the host PC.
   - If the R&S TSMA device can be detected, the scanner unit works properly.
   - If the R&S TSMA device can not be detected, continue with step 9.
9. Connect the SCAN ports with the patch cable and reboot the R&S TSMA.
10. Check the firewall settings.
    "Start > Control Panel > System and Security > Allow a Program through Windows Firewall"
    - If the measurement applications are activated for all networks (domain, home, public) contact the R&S service.
    - If the measurement applications are not activated, continue with step 11.
11. Activate the measurement applications for all networks (domain, home, public) in the firewall settings and start these measurement applications again.
    If the R&S TSMA device can not be detected contact the R&S service.

4.3 No Navigation Data in R&S ROMES / R&S NESTOR

Check if the GPS antenna is connected to the correct port.

Fig. 4-1: R&S TSMA Antenna Cabling - GPS

1 = GPS antenna

4.4 No RF Data

Check if the RF antenna is connected to the correct port.

Fig. 4-2: R&S TSMA Antenna Cabling - RF

1 = RF antenna

4.5 Sample App on Smart Phone could not connect with R&S TSMA

In order check the connection of the Sample App on a smart phone with the R&S TSMA, perform the following steps.

1. Check if the WLAN antenna and the Bluetooth antenna are connected properly.

Fig. 4-3: R&S TSMA Antenna Cabling - WLAN and Bluetooth

1 = Bluetooth antenna
2 = WLAN antenna

2. Check that the R&S TSMA is running and the LEDs of the device display a proper state.
3. Check that the R&S ViCom server on the R&S TSMA is active.
4. Make sure that WLAN and Bluetooth are activated via the web interface (see chapter 3.3.3.1, "Bluetooth Tab", on page 31 and chapter 3.3.3.2, "WLAN Tab", on page 31).
   - Bluetooth Status = On
   - Bluetooth Visibility = Visible
   - Wlan = On
   - Wlan Access Point = On

4.6 Check the Connection between Scanner Unit and CPU Unit

In order to have a properly working connection between the scanner unit and the internal PC unit, you have to check the following:

- Use the correct LAN connectors named SCAN.
- Use the correct cable for this connection (included in the delivery package)

Fig. 4-4: Connection between scanner unit and internal PC unit

1 = SCAN connector (Internal PC unit)
2 = SCAN connector (Scanner Unit)
3 = Connection cable (R&S No. 5016.1890.00)

5 Introduction to rViCom App

5.1 Overview

The R&S TSMA provides an open remote ViCom interface that allows the integration into Windows and Android based software tools. In the following example, an Android based remote ViCom app is described.

5.2 Requirements

5.2.1 General Requirements

The following requirements must be fulfilled in order to use this app successfully:

- An Android device with at least Android 4.4.2 (Android 4.4.4 is recommended)
- Possibility to establish connections via WLAN and/or Bluetooth
- A TSMA or a TSME connected to a PC with a running version of the rVicom Server.

5.2.2 Specific Requirements

Before starting a scan or test it is necessary to make sure that a connection can be established.

Bluetooth Connection

In order to use a Bluetooth connection, turn on the Bluetooth adapter and perform the Bluetooth pairing with the device the server is running on.

WLAN Connection

In order to use a WLAN connection, establish the connection to the WLAN network with the device the server is running on.

5.3 Usage

5.3.1 Connection Establishment

5.3.1.1 Connection Type Selection

In order to connect to R&S TSMA, it is either possible to use a WLAN connection or a Bluetooth connection.

The selection of the connection type depends on the measurement task.

The WLAN connection allows a throughput, which is about 10 times higher compared to Bluetooth.

On the other hand, the Bluetooth connection is less influenced by interference.

- For normal LTE, UMTS or GSM measurements, the connection via Bluetooth is sufficient.
- In case of higher data traffic due to more detailed measurements, a connection via WLAN is recommended.

Fig. 5-1: Connection Type Selection

5.3.1.2 Server Discovery

In order to connect with an existing server, the following steps must be performed.

Via Bluetooth

1. Choose a connection type, as described in chapter 5.3.1.1, "Connection Type Selection", on page 39.
2. The server discovery starts and the following dialog appears.

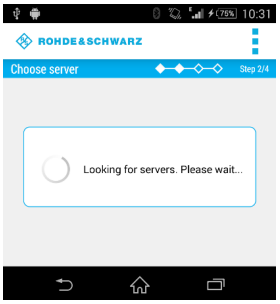

Fig. 5-2: Active Server Discovery

3. If a server is found, the server will be connected and the name of the server is displayed.

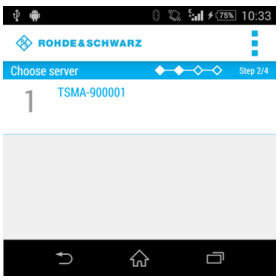

Fig. 5-3: Successful Server Discovery

4. Choose the server.

   The "Choose scan type" window opens. See figure 5-4.

In order to stop the server discovery, the app has to be closed.

If no server was found, it is possible to start a new scan by selecting "Rescan" in the menu inflator in the top right corner.

Via WLAN

The SampleApp tries to find the R&S ViCom Server (IP address 192.168.1.10). If it is available, the "Choose scan type" window appears. See figure 5-4.

Fig. 5-4: Choose scan type

The follwing scan types are available:

- **GSM RSSI Scan**
  Provides a GSM scan by selecting a band and radio channels
- **WCDMA Top-N Pilot Scan**
  Provides an UMTS scan by selecting a frequency band and the UARFCN
- **LTE Top Signal Scan**
  Provides an LTE scan by selecting the frequency band and the EARFCN
- **Throughput Test**
  Provides a throughput test for the connection using configurable buffer size
- **RF Powerscan**
  Provides a spectrum analysis by selecting the frequency range

5.3.2 GSM RSSI Scan

5.3.2.1 GSM Preferences

In order to start a GSM RSSI scan, the following steps must be performed.

1. Choose a frequency band.

   The channels will be set automatically to the maximum range available for the selected band.

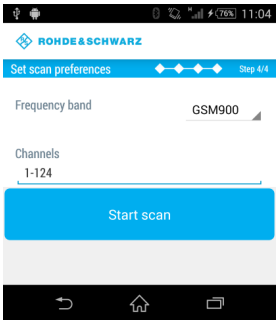

Fig. 5-5: Setting the GSM Preferences

2. If necessary, change the channels manually according to your needs. The input in the "Channels" field can be done like following.
   a) Add a single number for one specific channel.
      Example: 7
   b) Add a range of channels.
      Example: 1-124
   c) Add more than one single number separated by semicolon.
      Example: 2;4;7;76
3. Click "Start scan" to start the scan.

5.3.2.2 GSM Scan Results

The GSM scan result graph displays one column for each channel selected. The height of a column represents the RSSI value (in dBm).

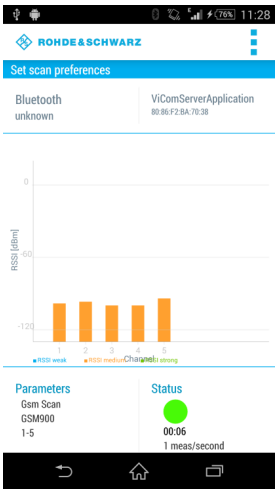

Fig. 5-6: GSM Scan Result View

Below the graph the measurement preferences and the status are displayed.

Parameters

Displays the configured preferences for the GSM RSSI scan.

Status

Displays the measurement duration and the measurement rate. The status button displays the following colored states.

- *Green*
  The measurement is running and measurement data will be received
- *Yellow*
  The measurement is running but no measurement data will be received
- *Red*
  The measurement was stopped

► In order to stop the scan, use "Stop scan" in the menu inflator in the top right corner.

5.3.3 WCDMA Top-N Pilot Scan

5.3.3.1 WCDMA Top-N Pilot Preferences

In order to start a WCDMA scan, the following steps must be performed.

1. Choose a frequency band.

   The minimum UARFCN of this band will be set automatically.

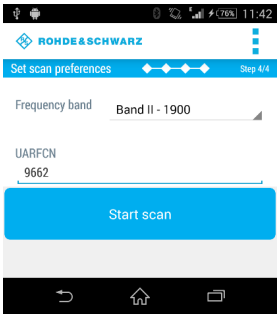

Fig. 5-7: Setting the WCDMA Preferences

2. If necessary, change the UARFCN according to your needs.

   Note: Due to processing issues, it is not possible to select more than one UARFCN.

3. Click "Start scan" to start the scan.

In the menu inflator on top of the right corner, templates for existing preferences (Munich and surrounding areas) can be selected.

5.3.3.2 WCDMA Top-N Pilot Scan Results

The WCDMA scan result graph displays one column for each SC found by the measurement. The height of a column represents the RSCP value (in dBm).

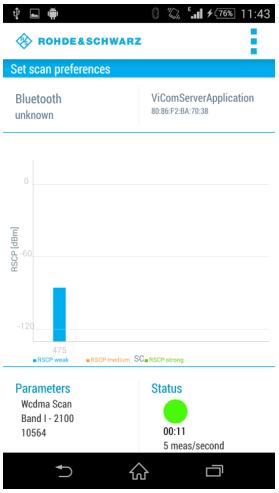

Fig. 5-8: WCDMA Scan Result View

Below the graph the measurement preferences and the status are displayed.

Parameters

Displays the configured preferences for the WCDMA scan.

Status

Displays the measurement duration and the measurement rate. The status button displays the following colored states.

- *Green*
  The measurement is running and measurement data will be received
- *Yellow*
  The measurement is running but no measurement data will be received
- *Red*
  The measurement was stopped

► In order to stop the scan, use "Stop scan" in the menu inflator in the top right corner.

5.3.4 LTE Top Signal Scan

5.3.4.1 LTE Top Signal Preferences

In order to start a LTE scan, the following steps must be performed.

1. Choose a frequency band.

   The minimum EARFCN of this band will be set automatically.

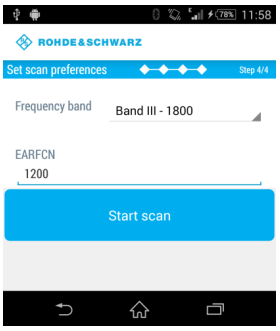

Fig. 5-9: Setting the LTE Preferences

2. If necessary, change the EARFCN according to your needs.

   Note: Due to processing issues, it is not possible to select more than EARFCN.

3. Click "Start scan" to start the scan.

In the menu inflator on top of the right corner, templates for existing preferences (Munich and surrounding areas) can be selected.

5.3.4.2 LTE Top Signal Scan Results

The LTE scan result graph displays one column for each PCI found by the measurement. The height of a column represents the PBCH RSRP value (in dBm).

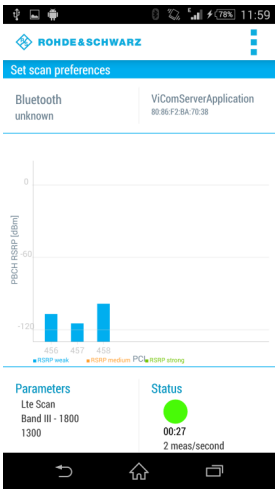

Fig. 5-10: LTE Scan Result View

Below the graph the measurement preferences and the status are displayed.

Parameters

Displays the configured preferences for the LTE scan.

Status

Displays the measurement duration and the measurement rate. The status button displays the following colored states.

- *Green*
  The measurement is running and measurement data will be received
- *Yellow*
  The measurement is running but no measurement data will be received
- *Red*
  The measurement was stopped

► In order to stop the scan, use "Stop scan" in the menu inflator in the top right corner.

5.3.5 Throughput Test Case

The throughput test case is useful to find out the throughput speed of your connection. This allows to decide, which connection type (WLAN or Bluetooth) should be used.

5.3.5.1 Throughput Preferences

In order to start the throughput test, the following steps must be performed.

1. Specify the parameter "Buffer size (in Byte)".
   The default buffer size is 20480 byte.

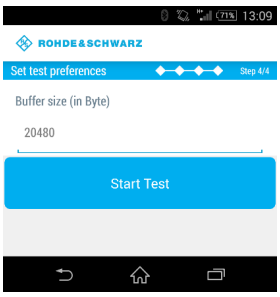

Fig. 5-11: Throughput Preferences

2. Click "Start Test" to start the throughput test.

For WLAN, the optimal buffer size varies between 950.000 byte and 1.000.000 byte.
For Bluetooth, the optimal buffer size varies between 81.000 byte and 165.000 byte.

5.3.5.2 Throughput Results

The result of the throughput test case is a line chart with the following axes:

- x-axis
  The x-axis displays the number of measurements
- y-axis
  The y-axis displays the corresponding throughput value (kB/s)

The blue line shows the measured values. The orange line represents the visualized average of all values.

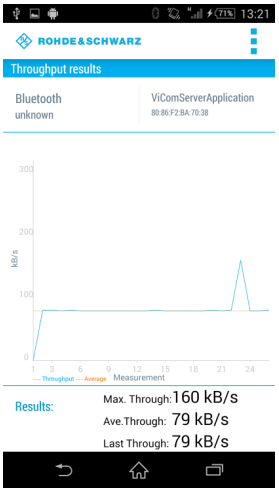

Fig. 5-12: Throughput Result View

Below the graph the following throughput results are displayed.

Results

- Max. Through
  Displays the maximum throughput
- Ave. Through
  Displays the average throughput
- Last Through
  Displays the current throughput

► In order to stop the scan, use "Stop scan" in the menu inflator in the top right corner.

5.3.6 RF Power Scan

5.3.6.1 RF Power Scan References

In order to start an RF power scan, the following steps must be performed.

1. Specify the parameters "Start Frequency (in Mhz)" and "End Frequency (in Mhz)" to define the frequency range of the RF power scan.
   The maximum range is from 350 MHz to 4.400 MHz.

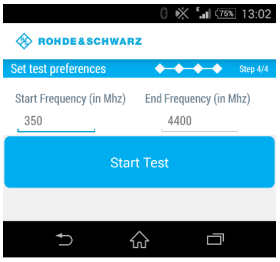

Fig. 5-13: RF Power Scan References

2. Click "Start Test" to start the scan.

5.3.6.2 RF Power Scan Results

The result of the RF power scan is a spectrum of the frequency range set before with the following axes:

- x-axis
  The x-axis displays the frequency
- y-axis
  The y-axis displays the power level for each frequency (dBm)

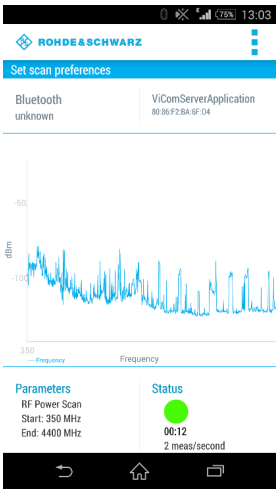

Fig. 5-14: RF Power Scan Results

Below the graph the measurement preferences and the status are displayed.

Parameters

- Start
  Displays the start frequency
- End
  Displays the end frequency

Status

Displays the measurement duration and the measurement rate. The status button displays the following colored states.

- *Green*
  The measurement is running and measurement data will be received
- *Yellow*
  The measurement is running but no measurement data will be received
- *Red*
  The measurement was stopped

► In order to stop the scan, use "Stop scan" in the menu inflator in the top right corner.

Glossary: Abbreviations

Symbols

1xEvDO: Evolution - Data Optimized

B

BTS: Base Transceiver Station

C

CDMA: Code Division Multiple Access

D

DHCP: Dynamic Host Control Protocol

DL: Downlink

DNS: Domain Name Service

E

EARFCN: E-UTRA Absolute Radio Frequency Channel Number

EMI: Electromagnetic Interference

G

GPS: General Positioning System

GSM: Global System for Mobile Communication

H

HDMI: High Definition Multimedia Interface

L

LAN: Local Area Network

LTE: Long Term Evolution

M

MCS: Modulation and Coding Scheme

MIMO: Multiple Input - Multiple Output

P

PBCH: Physical Broadcast Channel

PCI: Physical Cell ID

R

RNTI: Radio Network Temporary Identifier

RSCP: Received Signal Code Power

RSRP: Reference Signal Received Power

RSSI: Received Signal Strength Indication

S

SC: Scrambling Code

SSID: Service Set Identifier

T

TD-SCDMA: Time Division - Synchronous Code Division Multiple Access

TETRA: Terrestrial Trunked Radio

TTI: Transmission Time Interval

U

UARFCN: UTRAN Absolute Radio Frequency Channel Number

UL: Uplink

W

WCDMA: Wideband Code Division Multiple Access

WLAN: Wireless Local Area Network

Index

B

Battery Pack 8

C

Carrying Bag 9

G

GSM Scan 41
- Preferences 41
- Results 42

H

HDMI Port 15

L

LED
- LAN Connector 15
- Status 13

LTE Scan 44
- Preferences 44
- Results 45

M

MINI-Display Port 15

O

Options 9
- 1xEV-DO 10
- Automatic Channel Detection 11
- Band Options 11
- CDMA2000 10
- GSM 10
- LTE Downlink Allocation Analyzer 11
- LTE-MIMO 11
- RF Power Scan 10
- TD-SCDMA 10
- TETRA 11
- WCDMA 10
- WiMax 11

R

Remote ViCom 38
- Requirements 38
- Usage 39

RF Power Scan 47
- References 47
- Results 48

T

Throughput Test Case 46
- Preferences 46
- Results 47

W

WCDMA Scan 43
- Preferences 43
- Results 44